



# ENM Filters

Nylon 6,6 Membrane




## Fine Particle Removal

ENM cartridge and capsule filters are made with Nylon 6,6 membrane. These long-proven filters are used for ultrafine particle removal in ultrapure water, chemicals, solvents and other aqueous solutions. Pore sizes range from 0.10 to 0.65  $\mu\text{m}$  and the filter sizes scale from laboratory to full production using identical materials to ensure consistent results.

The ENM filters have high retention and throughput as well as broad chemical compatibility making them well suited for the filtration of solvents and other harsh chemicals. They are used to as part of particle contamination control systems and remove ultrafine particles.

ENM filters are pulse power flushed until the rinse effluent reaches 18+ Megohm-cm and less than 3ppb TOC. Each filter is individually tested to ensure integrity.

Critical Process provides unrivaled delivery times, technical consulting before purchasing, and very competitively priced high-performance products. Our comprehensive testing & analysis and validation services support your team whenever they need it. Your process experts partnering with our filtration experts is how we deliver your company's solution right the first time.

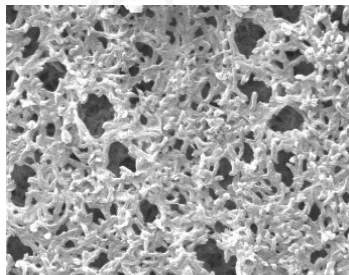

ENM filters are recommended for:

- Ultrapure Water
- Chemicals
- Solvents
- Photoresists
- Developers



**CARTRIDGES – Nominal Dimensions**  
Length: 5 to 40 in. (12.7 to 101.6 cm)  
Outside Diameter: 2.75 in. (7.0 cm)



**CAPSULES – Nominal Dimensions**  
Length: 2 to 30 in. (5.1 to 76.2 cm)  
Outside Diameter: 3.50 in. (8.9 cm)

## Maximum Operating Parameters

	CARTRIDGES	CAPSULES
<b>Liquid Operational Pressure</b>	N/A	80 psi at 68 °F (5.52 bard at 20 °C)
<b>Gases Operational Pressure</b>	N/A	60 psi at 68 °F (4.14 bar at 20 °C)
<b>Operating Temperature (water)</b>	180 °F at 30 psid (82 °C at 2.07 bard)	110 °F at 30 psid (43 °C at 2.07 bard)
<b>Forward Differential Pressure</b>	80 psid at 68 °F (5.52 bard at 20 °C) (Liquid and Gas)	Liquid - 80 psid at 68 °F (5.52 bard at 20 °C) Gas - 60 psi at 68 °F (4.14 bar at 20 °C)
<b>Reverse Differential Pressure</b>	50 psid at 68 °F (3.45 bard at 20 °C)	50 psid at 68 °F (3.45 bard at 20 °C)
<b>Recommended Changeout Pressure</b>	35 psid (2.41 bard)	35 psid (2.41 bard)

## Sanitization & Sterilization

<b>Filtered Hot Water*</b>	90 °C (194 °F), 30 minutes, multiple cycles, max 3 psid forward flow	N/A
<b>Inline Steam*</b>	275 °F (135 °C), 30 min, 25+ cycles	N/A
<b>Autoclave*</b>	250 °F (121 °C), 30 min, 25+ cycles	250 °F (121 °C), 30 min, 25+ cycles
<b>Chemical Sanitization</b>	Performed using industry standard concentrations of hydrogen peroxide, peracetic acid, and other selected chemicals.	

\*Cartridge Filters – For all elevated temperature procedures above, a stainless-steel support ring is required.

## Filtration Area (Nominal)

	CAPSULES	CARTRIDGES AND CAPSULES				CARTRIDGES
Length	2"	5"	10"	20"	30"	40"
	5.08cm	12.7cm	25.4cm	50.8cm	76.2cm	101.6cm
Area	1.2 ft <sup>2</sup>	3.3 ft <sup>2</sup>	7.0 ft <sup>2</sup>	14.0 ft <sup>2</sup>	21.0 ft <sup>2</sup>	28.0 ft <sup>2</sup>
	0.11m <sup>2</sup>	0.30m <sup>2</sup>	0.65m <sup>2</sup>	1.30m <sup>2</sup>	1.95m <sup>2</sup>	2.60m <sup>2</sup>

## Integrity Testing

PORE SIZE	DIFFUSION TEST PRESSURE*	
	PSIG	BARG
0.10	48	3.30
0.22	35	2.41
0.45	20	1.37
0.65	15	1.03

### DIFFUSION SPECIFICATIONS\*

Length	2"	5"	10"	20"	30"	40"
mL/min	≤ 4.3	≤ 14.1	≤ 30	≤ 60	≤ 90	≤ 120

\* All specifications are for water wetted membrane

\*\* Test pressure exceeds operational limits of capsule filters.  
Use the Diffusion Test method.

## Construction Materials

<b>Filtration Media</b>	Nylon 6,6 Membrane with polyester support
<b>Media Support</b>	Polypropylene
<b>End Caps, Center Core, Outer Support Cage, Capsule Housing</b>	Polypropylene
<b>Sealing Method</b>	Thermal Bonding
<b>O-Rings/Gaskets Cartridges only</b>	Buna, Viton® (or FKM), EPDM, Silicone, FEP Encapsulated Silicone, FEP Encapsulated Viton (or FKM)

## Extractables

ENM filters typically exhibit low levels of non-volatile residues.


## TOC and Conductivity

ENM filter water effluent conforms with the TOC and water conductivity standards of SEMI Standard F63 after an appropriate flush with ultrapure water.

## Non-Fiber Releasing


ENM filters comply with Title 21 CFR sections 210.3 (b)(6) and 211.72, for non-fiber releasing filters.

## Flow Rates for ENM Cartridges by Pore Size

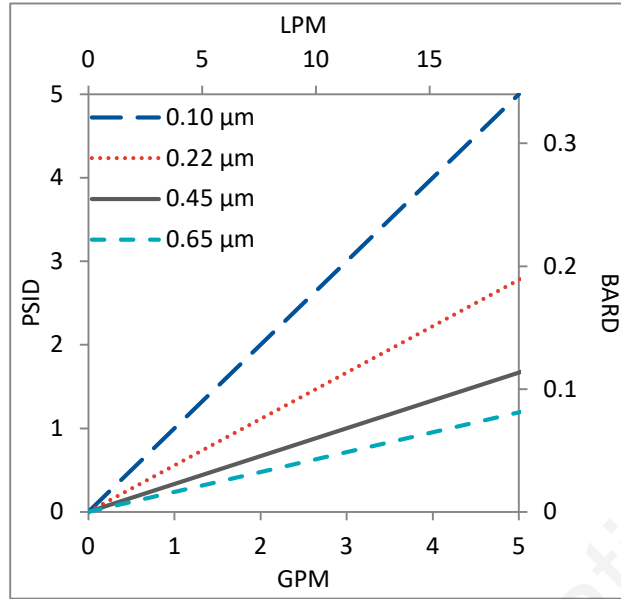

Flow rates for Cartridge filters are per 10-inch length. The test fluid is water at ambient temperature.

## Flow Rates for ENM Capsules by Pore Size

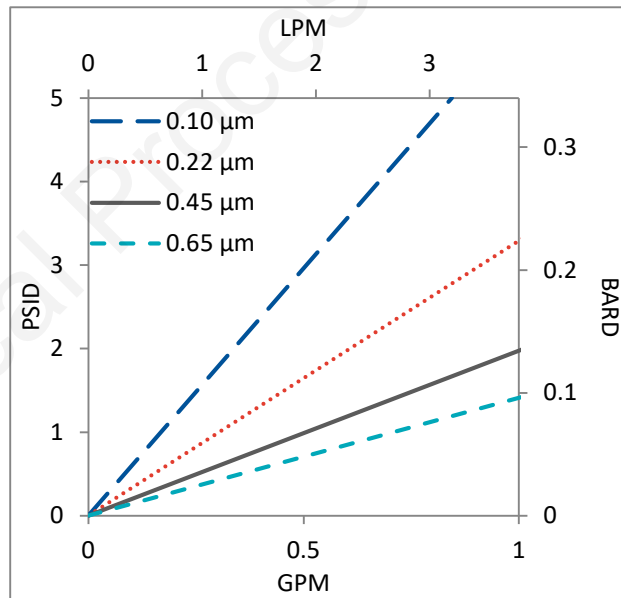

Flow rates for Capsule filters are tested using a 2" capsule filter with 1" sanitary inlet and outlet ports. The test fluid is water at ambient temperature. Flow rates for larger capsules will scale with filtration area. Rates will vary based on end configuration of the capsule.

## ENM Filters Ordering Information

Fill in the corresponding codes in the boxes below to build your Part Number.

To consult with one of our technical team members, request a quote or place an order:  
call (603) 880-4420 or [contact us here](#).

### Cartridge Filters

ENM   000

Pore Size Code	SS Ring	Length	O-Ring/Gasket Code	End Cap Code*
-10 = 0.10 $\mu$ m -20 = 0.22 $\mu$ m -40 = 0.45 $\mu$ m -60 = 0.65 $\mu$ m	S = Ring N = No Ring	05 = 5 in. (12.7 cm) 97 = 9.75 in. (24.8 cm) (DOE only) 01 = 10 in. (25.4 cm) 02 = 20 in. (50.8 cm) 03 = 30 in. (76.2 cm) 04 = 40 in. (101.6 cm)	S = Silicone B = Buna V = Viton (or FKM) T = FEP Encapsulated Viton (or FKM) E = EP R = FEP Encapsulated Silicone	0 = Flat Gasket, DOE 2 = 2-222 O-ring/Plug 4 = 213/119 Internal O-ring/Plug 5 = 2-222 O-ring/Flat 6 = 2-226 O-ring/Flat 8 = 2-222 O-ring/Spear 9 = 2-226 O-ring/Spear

[\\*Additional End Configurations Available](#)

### Capsule Filters

CP ENM   000    -

Pore Size Code	Length	Inlet	Outlet	Side Vent Options	O-Ring (Bleed Valve Only)
-10 = 0.10 $\mu$ m -20 = 0.22 $\mu$ m -40 = 0.45 $\mu$ m -60 = 0.65 $\mu$ m	A = 2" B = 5" 1 = 10" 2 = 20" 3 = 30"	A = 1/4" Female NPT B = 1/4" Male NPT C = 3/8" Female NPT D = 1/2" Female NPT E = 1/2" Male NPT F = 1" Sanitary G = Hose Barb* H = 1 1/2" Sanitary with side vent I = 1/2" Single Stepped Barb with side vent J = 3/4" Single Step Barb with Side Vent Y = 3/8" Compression (JACO®) (Top Luer lock vent only) Z = 6mm Quick Disconnect (Top Luer lock vent only)	A = 1/4" Female NPT B = 1/4" Male NPT C = 3/8" Female NPT D = 1/2" Female NPT E = 1/2" Male NPT F = 1" Sanitary G = Hose Barb* H = 1 1/2" Sanitary with side vent I = 1/2" Single Stepped Barb with side vent IB = 1/2" Single Stepped Barb with filling bell and side vent J = 3/4" Single Step Barb with Side Vent Y = 3/8" Compression (JACO®) (Top Luer lock vent only) Z = 6mm Quick Disconnect (Top Luer lock vent only)	1 = Luer Lock 2 = 1/8" Bleed Valve 3 = 1/4" Bleed Valve	S = Silicone E = EP V = Viton B = Buna K = FFKM

**Pre-Sterilized**  
S = Pre-Sterilized  
G = Gamma Stable  
N = Not Sterilized

\*Fits hoses/tubes with inner diameter 11/32 to 9/16 inches



One Chestnut Street  
Nashua, NH 03060  
603.880.4420  
FAX: 603.880.4536

CriticalProcess.com

The information contained herein is subject to change without notice. The Critical Process Filtration logo is a trademark of Critical Process Filtration, Inc. Viton is a trademark of DuPont Performance Elastomers L.L.C.  
© 2025 Critical Process Filtration, Inc. • All Rights Reserved

Data Sheet ENMDS Rev B