



FCWPS Filters

High Capacity PES Membrane



FCWPS cartridge and capsule filters are constructed with proprietary high capacity Polyethersulfone (PES) membranes, available in single or dual layers. Designed to comply with all FDA requirements for the food industry, they are used for reducing particles in critical clarification and filling processes found in beer, wine, water and juice production. Pore sizes range from 0.1 to 1.0 μm and filter sizes scale from laboratory to full production using identical materials to ensure consistent results.


Critical Process' FCWPS filters are hydrophilic and deliver high flow and throughput. Their low binding characteristics make them highly efficient, which is critical to protecting downstream filters from prefoiling and extending the life of final filters.

Critical Process provides unrivaled delivery times, technical consulting before purchasing, and very competitively priced high-performance products. Our comprehensive testing & analysis and validation services support your team whenever they need it. Your process experts partnering with our filtration experts is how we deliver your company's solution right the first time.

Clarification & Prefiltration



CARTRIDGES – Nominal Dimensions
Length: 5 to 40 in. (12.7 to 101.6 cm)
Outside Diameter: 2.75 in. (7.0 cm)

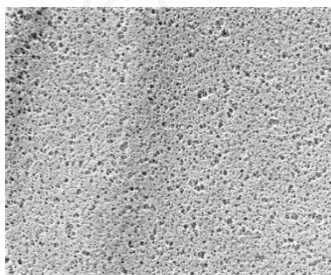

FCWPS filters are recommended for the filtration of:

- Wine
- Beer
- Clear Juices
- Bottled Water
- Process Water
- Clean-in-Place Solutions



CAPSULES – Nominal Dimensions
Length: 2 to 30 in. (5.1 to 76.2 cm)
Outside Diameter: 3.50 in. (8.9 cm)

Maximum Operating Parameters

	CARTRIDGES	CAPSULES
Liquid Operational Pressure	N/A	80 psi at 68 °F (5.52 bard at 20 °C)
Gases Operational Pressure	N/A	60 psi at 68 °F (4.14 bar at 20 °C)
Operating Temperature (water)	180 °F at 30 psid (82 °C at 2.07 bard)	110 °F at 30 psid (43 °C at 2.07 bard)
Forward Differential Pressure	80 psid at 68 °F (5.52 bard at 20 °C) (Liquid and Gas)	Liquid - 80 psid at 68 °F (5.52 bard at 20 °C) Gas - 60 psi at 68 °F (4.14 bar at 20 °C)
Reverse Differential Pressure	50 psid at 68 °F (3.45 bard at 20 °C)	50 psid at 68 °F (3.45 bard at 20 °C)
Recommended Changeout Pressure	35 psid (2.41 bard)	35 psid (2.41 bard)

Sanitization & Sterilization

Filtered Hot Water*	90 °C (194 °F), 30 minutes, multiple cycles, max 3 psid forward flow	N/A
Inline Steam*	275 °F (135 °C), 30 min, 25+ cycles	N/A
Autoclave*	250 °F (121 °C), 30 min, 25+ cycles	250 °F (121 °C), 30 min, 25+ cycles
Chemical Sanitization	Performed using industry standard concentrations of hydrogen peroxide, peracetic acid, sodium hypochlorite and other selected chemicals.	

*Cartridge Filters – For all elevated temperature procedures above, a stainless-steel support ring is required.

Filtration Area (Nominal)

	CAPSULES	CARTRIDGES AND CAPSULES				CARTRIDGES
Length	2"	5"	10"	20"	30"	40"
	5.08cm	12.7cm	25.4cm	50.8cm	76.2cm	101.6cm
Area – Single Layer	1.1 ft ²	3.1 ft ²	6.7 ft ²	13.4 ft ²	20.1 ft ²	26.8 ft ²
	0.11m ²	0.29m ²	0.62m ²	1.24m ²	1.86m ²	2.48m ²
Area – Dual Layer	0.9 ft ²	2.5 ft ²	5.3 ft ²	10.6 ft ²	15.9 ft ²	21.2 ft ²
	0.08m ²	0.23m ²	0.49m ²	0.98m ²	1.47m ²	1.96m ²

Extractables

FCWPS filters typically exhibit low levels of non-volatile residues.

Non-Fiber Releasing

FCWPS filters comply with Title 21 CFR sections 210.3 (b)(6) and 211.72, for non-fiber releasing filters.



FDA and EC Compliance

Materials meet the requirements listed by the FDA as appropriate for use in articles intended for repeated food contact as specified in Title 21 CFR sections 174.5, 177.1500, 177.1520, 177.1630, 177.2440, and 177.2600 as applicable. All materials used to make the filters are listed in European Commission Regulation EU/10/2011, Annex 1.



Construction Materials

Filtration Media	Single or Dual Layer High Capacity PES Membrane with Polyester Support
Media Support	Polypropylene
End Caps, Center Core, Outer Support Cage, Capsule Housing	Polypropylene
Sealing Method	Thermal Bonding
O-Rings/Gaskets Cartridges only	Buna, Viton® (or FKM), EPDM, Silicone, FEP Encapsulated Silicone, FEP Encapsulated Viton (or FKM)

Flow Rates for FCWPS Cartridges by Pore Size

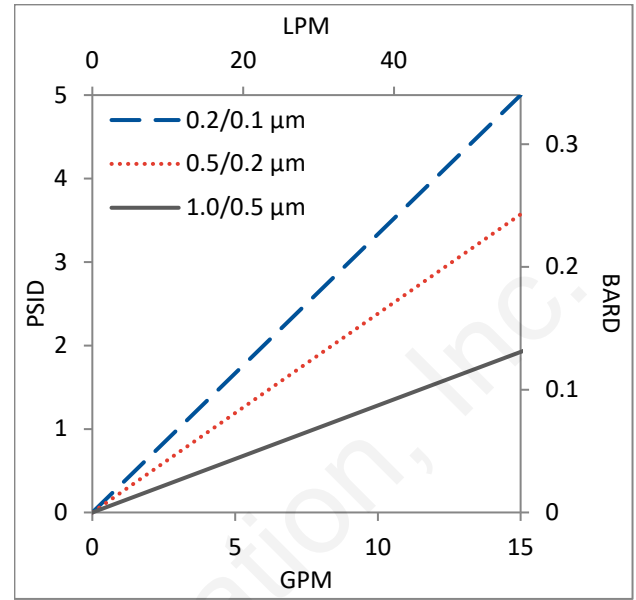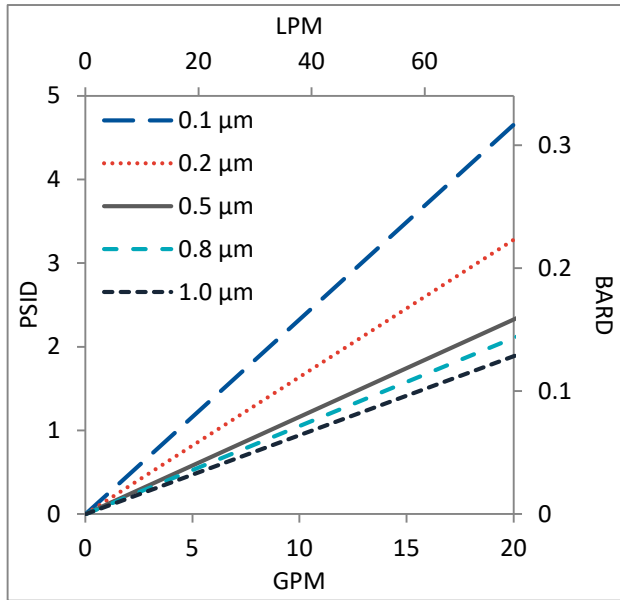

Flow Rates for FCWPS Capsules by Pore Size

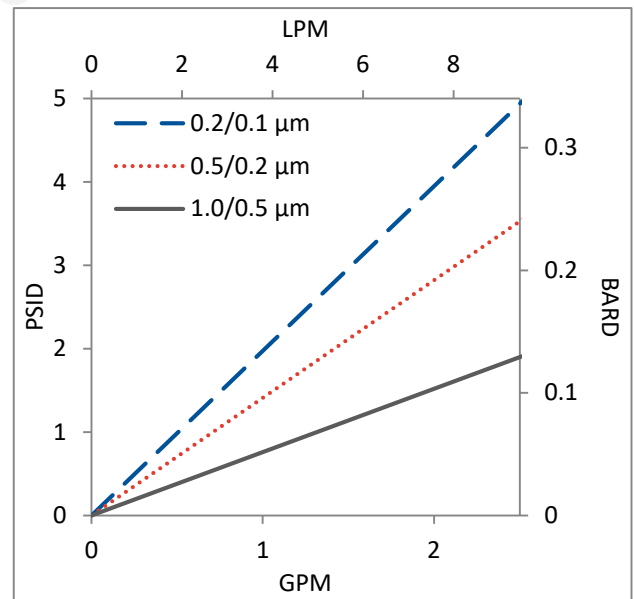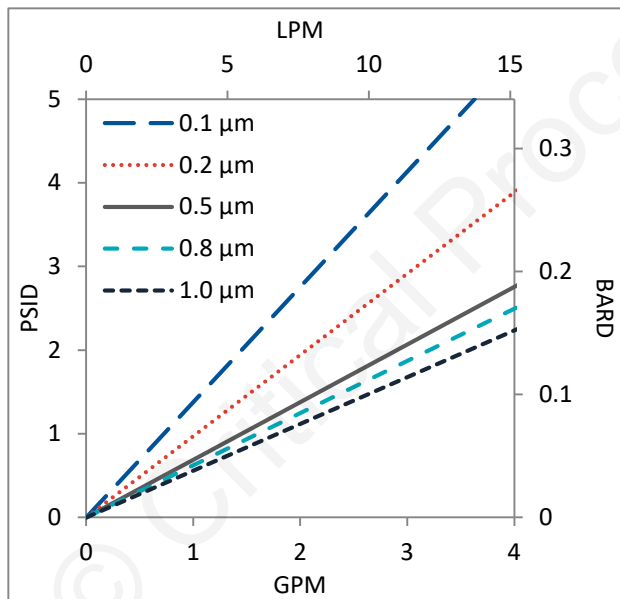

FCWPS Filters Ordering Information

Fill in the corresponding codes in the boxes below to build your Part Number.

To consult with one of our technical team members, request a quote or place an order:
call (603) 880-4420 or [contact us here](#)

Cartridge Filters

FCWPS 000

Prefilter Pore Size Code Blank = no prefilter -20 = 0.2 μ m -50 = 0.5 μ m -80 = 0.8 μ m 1-0 = 1.0 μ m	Final Layer Pore Size Code -10 = 0.1 μ m -20 = 0.2 μ m -50 = 0.5 μ m -80 = 0.8 μ m 1-0 = 1.0 μ m	SS Ring S = Ring N = No Ring	O-Ring/Gasket Code S = Silicone B = Buna V = Viton (or FKM) T = FEP Encapsulated Viton (or FKM) E = EP R = FEP Encapsulated Silicone	End Cap Code* 0 = Flat Gasket, DOE 2 = 2-222 O-ring/Plug 4 = 213/119 Internal O-ring/Plug 5 = 2-222 O-ring/Flat 6 = 2-226 O-ring/Flat 8 = 2-222 O-ring/Spear 9 = 2-226 O-ring/Spear
---	--	---	---	---

Length
05 = 5 in. (12.7 cm)
97 = 9.75 in. (24.8 cm)
01 = 10 in. (25.4 cm)
02 = 20 in. (50.8 cm)
03 = 30 in. (76.2 cm)
04 = 40 in. (101.6 cm)

[*Additional end configurations available](#)

Capsule Filters

CP FCWPS 000 -

Prefilter Pore Size Code Blank = no prefilter -20 = 0.2 μ m -50 = 0.5 μ m -80 = 0.8 μ m 1-0 = 1.0 μ m	Final Layer Pore Size Code -10 = 0.1 μ m -20 = 0.2 μ m -50 = 0.5 μ m -80 = 0.8 μ m 1-0 = 1.0 μ m	Length A = 2" B = 5" 1 = 10" 2 = 20" 3 = 30"	Inlet A = 1/4" Female NPT B = 1/4" Male NPT C = 3/8" Female NPT D = 1/2" Female NPT E = 1/2" Male NPT F = 1" Sanitary G = Hose Barb* H = 1 1/2" Sanitary with side vent I = 1/2" Single Stepped Barb with side vent J = 3/4" Single Step Barb with Side Vent Y = 3/8" Compression (JACO®) (Top Luer lock vent only) Z = 6mm Quick Disconnect (Top Luer lock vent only)	Outlet A = 1/4" Female NPT B = 1/4" Male NPT C = 3/8" Female NPT D = 1/2" Female NPT E = 1/2" Male NPT F = 1" Sanitary G = Hose Barb* H = 1 1/2" Sanitary with side vent I = 1/2" Single Stepped Barb with side vent IB = 1/2" Single Stepped Barb with filling bell and side vent J = 3/4" Single Step Barb with Side Vent Y = 3/8" Compression (JACO®) (Top Luer lock vent only) Z = 6mm Quick Disconnect (Top Luer lock vent only)	Side Vent Options 1 = Luer Lock 2 = 1/8" Bleed Valve Valve 3 = 1/4" Bleed Valve
---	--	--	---	---	--

Pre-Sterilized or Not
S = Pre-Sterilized
G = Gamma Stable
N = Not Sterilized

O-Rings (Bleed Valve Only)
S = Silicone
E = EP
V = Viton (or FMK)
B = Buna
K = FFKM

*Fits hoses/tubes with inner diameter 11/32 to 9/16 inches



One Chestnut Street
Nashua, NH 03060
603.880.4420
FAX: 603.880.4536

CriticalProcess.com

The information contained herein is subject to change without notice. The Critical Process Filtration logo is a trademark of Critical Process Filtration, Inc. Viton is a trademark of DuPont Performance Elastomers L.L.C. © 2025 Critical Process Filtration, Inc. • All Rights Reserved

Data Sheet FCWPSDS Rev B