



# FGD Micro Capsule Filters

## Pleated Fiberglass Depth Media

FGD Micro Capsule filters are constructed with pleated Fiberglass depth media for clarification and prefiltration of aqueous liquids. The FGD Micro Capsule filters comply with all FDA requirements for the food industry. Pore sizes range from 0.22 to 10  $\mu\text{m}$ . Other filter devices scale from laboratory to full production using identical materials to ensure consistent results.

FGD Micro Capsule filters are manufactured to ensure fiber free effluent. They are rated at 99% retention at the indicated pore size and have a high contaminant holding capacity. FGD Micro Capsules are designed for high throughput because of its fibrous construction, which also allows for cartridge cleaning and re-use in some applications.

Critical Process provides unrivaled delivery times, technical consulting before purchasing, and very competitively priced high-performance products. Our comprehensive testing & analysis and validation services support your team whenever they need it. Your process experts partnering with our filtration experts is how we deliver your company's solution right the first time.

## Clarification & Prefiltration




### MICRO CAPSULES – Nominal Dimensions

Body Length: 1.9 in. (4.8 cm)

Overall Length: 2.8 to 3.8 in. (7.1 to 9.7 cm)

Outside Diameter: 2.6 in. (6.6 cm)

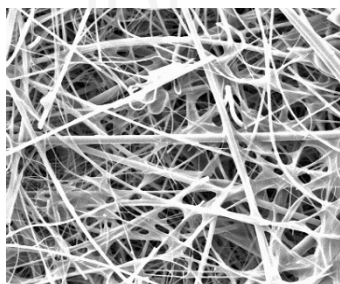

FGD Micro Capsule filters are recommended for clarification & prefiltration in:

- Wine or Beer (clarification)
- Soft Drinks
- Bottled Water
- Syrups
- Cosmetics
- Air & Gases

## Maximum Operating Parameters

MICRO CAPSULES	
<b>Liquid Operational Pressure</b>	80 psi at 68 °F (5.52 bard at 20 °C)
<b>Gases Operational Pressure</b>	60 psi at 68 °F (4.14 bar at 20 °C)
<b>Operating Temperature (water)</b>	110 °F at 30 psid (43 °C at 2.07 bard)
<b>Forward Differential Pressure</b>	50 psid at 68 °F (3.45 bard at 20 °C)
<b>Reverse Differential Pressure</b>	40 psid at 68 °F (2.76 bard at 20 °C)
<b>Recommended Changeout Pressure</b>	35 psid (2.41 bard)

## Sanitization & Sterilization

<b>Autoclave</b>	250 °F (121 °C), 30 min, 5+ cycles
<b>Chemical Sanitization</b>	Performed using industry standard concentrations of hydrogen peroxide, peracetic acid, sodium hypochlorite and other selected chemicals.

## Filtration Area (Nominal)

Pleated Depth Media	
Area	0.476 ft <sup>2</sup>
	442 cm <sup>2</sup>

## Construction Materials

<b>Filtration Media</b>	Pleated Fiberglass Depth Media
<b>Media Support</b>	Polyester
<b>End Caps, Center Core, Outer Support Cage, Micro Capsule Housing</b>	Polypropylene
<b>Sealing Method</b>	Thermal Bonding

## Extractables

FGD Micro Capsule filters typically exhibit low levels of non-volatile residues.


## Non-Fiber Releasing

FGD Micro Capsule filters comply with Title 21 CFR sections 210.3 (b)(6) and 211.72, for non-fiber releasing filters.

## FDA and EC Compliance

Materials meet the requirements listed by the FDA as appropriate for use in articles intended for repeated food contact as specified in Title 21 CFR sections 174.5, 177.1500, 177.1520, 177.1630, 177.2440, and 177.2600 as applicable. All materials used to make the filters are listed in European Commission Regulation EU/10/2011, Annex 1.

## Flow Rates for FGD Micro Capsules by Pore Size

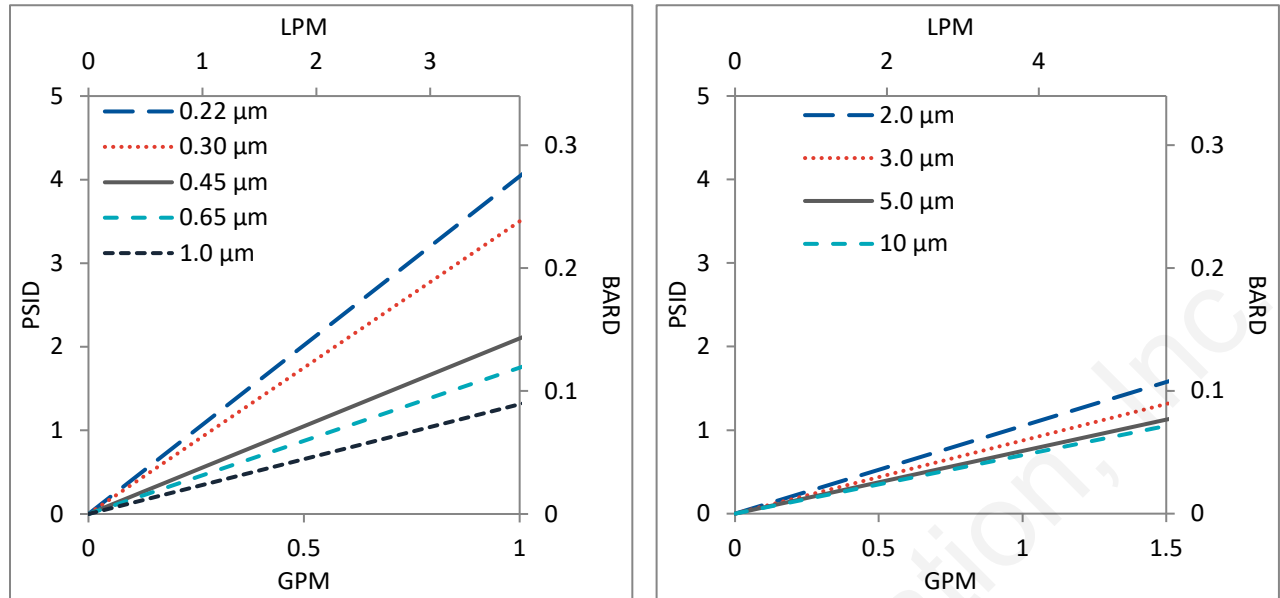


Flow rates for Micro Capsule filters are per filter. The test fluid is water at ambient temperature. Flows are tested using a Micro capsule filter with ½" Sanitary inlet and outlet ports. Rates will vary based on end configuration of the Micro capsule.

## FGD Micro Capsule Filters Ordering Information

All Critical Process filters are configurable to meet customer specifications. Fill in the corresponding codes in the boxes below to build your Part Number.

To consult with one of our technical team members, request a quote or place an order: call (603) 880-4420 or [contact us here](#).

### Micro Capsule Filters

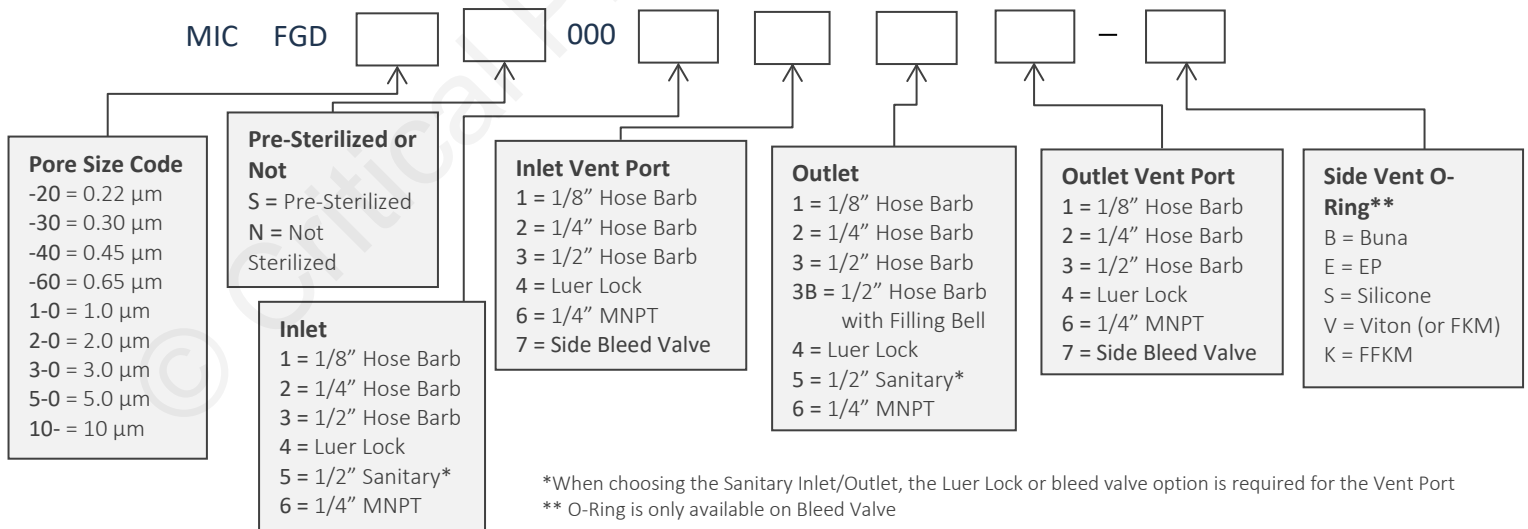

One Chestnut Street  
Nashua, NH 03060  
603.880.4420  
FAX: 603.880.4536

CriticalProcess.com

The information contained herein is subject to change without notice. The Critical Process Filtration logo is a trademark of Critical Process Filtration, Inc. Viton is a trademark of DuPont Performance Elastomers L.L.C.  
© 2024 Critical Process Filtration, Inc. • All Rights Reserved

Data Sheet FGD Micro DS Rev -